

## Survival Guide

### Vista-20P

#### 2 Partition Security System Common Lobby Partition 3

- 48 Zones Max.
  - 8 Wired Zones Standard
  - 40 Wired Expansion (4219/4229)
  - 40 Wireless Zones (5800)
  - 16 Keyfob Zones (49-64)
- 4-Wire Smokes (Must use Relay to Reset)
- 16 2-Wire Smokes on Zone 1
  - 10 2-Wire Smokes if using Clean Me option (ESL)
- Double Balanced Zones
- Zone Doubling on zones 2-8
  - (resistors not included)
- 16 Programmable Outputs Total
  - 16 X-10 using 4300/1321X10 Xformer.
- 12 Zone Lists
  - Zone List 3 = Chime by Zone
  - Zone List 4 = Cross Zones (selectable time in \*85)
  - Zone List 5 = Night Stay Zones
  - Zone Lists 9-12 = Zones to send to pager
- End User Relay Control (#7nn / #8nn)
- 2 Voltage Triggers
- Scheduling (01-16 =End User; 17-32=Installer)
- 8 Keypads: 4137AD, 6137,6150/RF, 6160, 6162, 6128/RF, 5137/AD, 6138, & 6138 Address 16-23, programmed in 190-196
- Custom Installers Message (Also known as partition descriptors: use Custom words 11 for partition 1, 12 for partition 2, & 13 for partition 3)
- AAV Option (\*91)
- 2 Partitions
  - Common Lobby (Partition 3)
- 4286/4500 Compatible (P1 ONLY!!)
- 100 Event Log
  - (Viewable Through Keypad or Downloader)
- Paging (Up to 4 Pagers)
- 48 User Codes (4 Authority Levels)
  - 0=User      2=Guest
  - 1=Arm Only    3=Duress
  - 4=Partition Master
- 600mA Aux. 2A Alarm Power
- Built In Line Fault Monitor
- Function Key Programming (\*57)
  - Keypad panics
  - Macro
  - One-Button Paging
  - One-Button Arming
  - Relay Activation
  - Time Display
- Silent Burg Zone Type (ZT24)
- NEW ZONE TYPES:**
  - Monitor Zone Type (ZT 12)
  - Carbon Monoxide Zone Type (ZT 14)
  - Fire W/Verification Zone Type (ZT16)
  - Keyswitch zone Type (ZT77)
  - 4 Programmable Zone Types (90-93)